PolyCom Soundpoint 7000

Head Office:
Level 1 21 Shierlaw Ave Canterbury 3126, Victoria, Australia

1300 0 JINGL
1 3 0 0 0 5 4 6 4 5

www.jingl.com.au

Configuring PolyCom SoundPoint 7000

1. View and record the unique MAC address of the handset which can be found at the base of the handset.

Head Office:
Level 1 21 Shierlaw Ave Canterbury 3126, Victoria, Australia

1300 0 JINGL
1 3 0 0 0 5 4 6 4 5

www.jingl.com.au

2. Logon to the jingl web portal, using specific customer domain URL
https://'customer'.jingl.com.au
Enter your User Name and Password

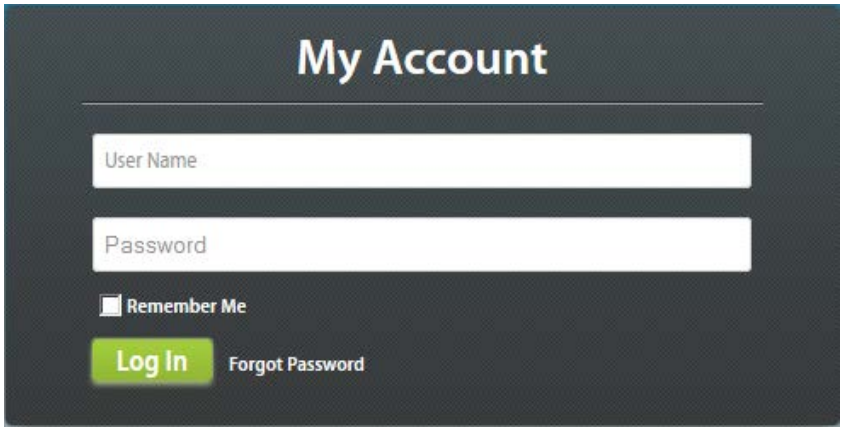

Presented with Dashboard

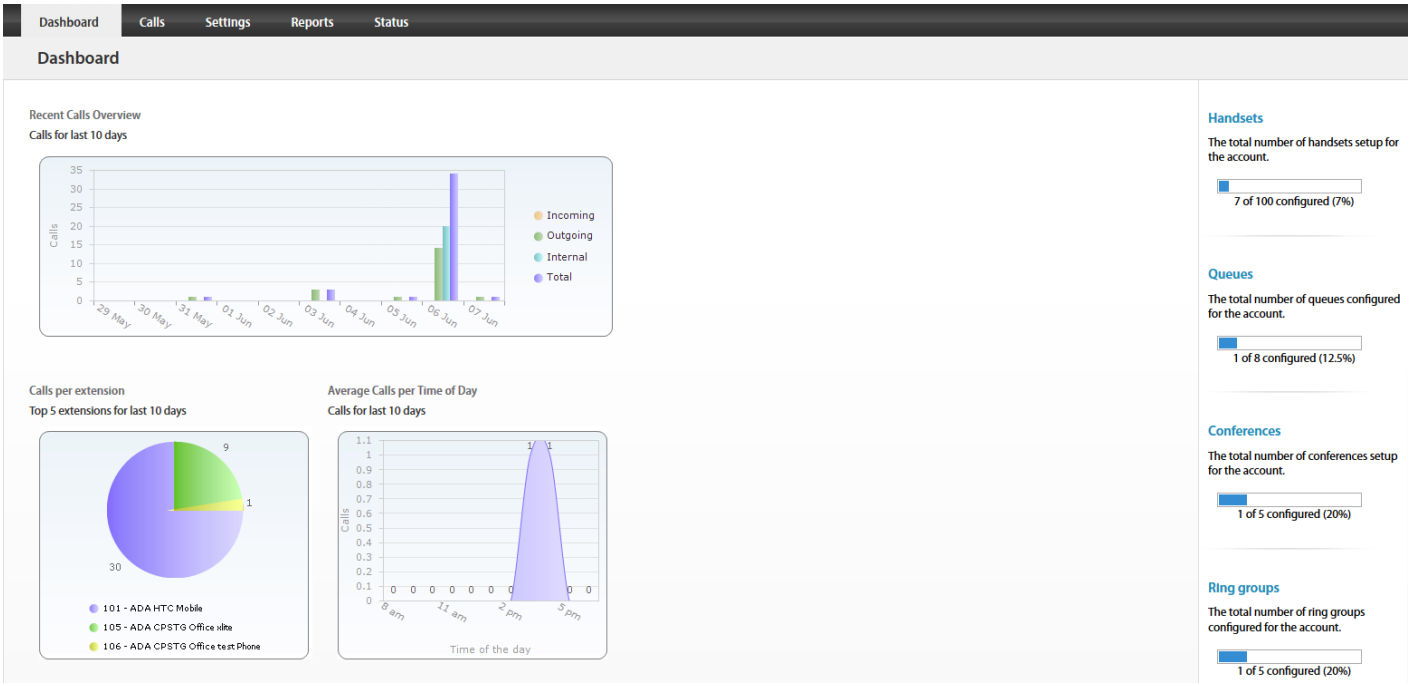

3. Select and click the settings menu

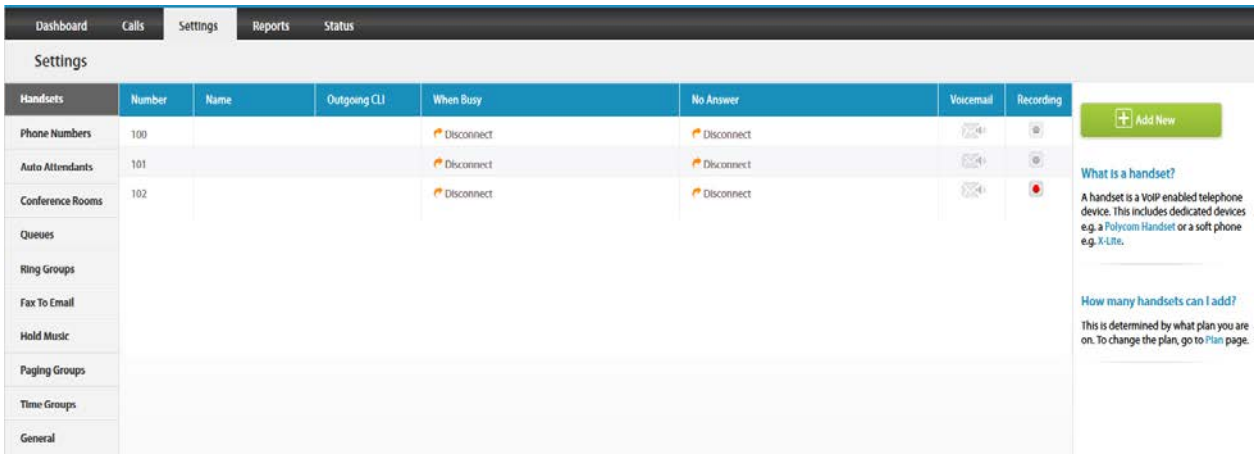

4. Click on “Add new”
   In general tab, choose and enter extension number and a display name

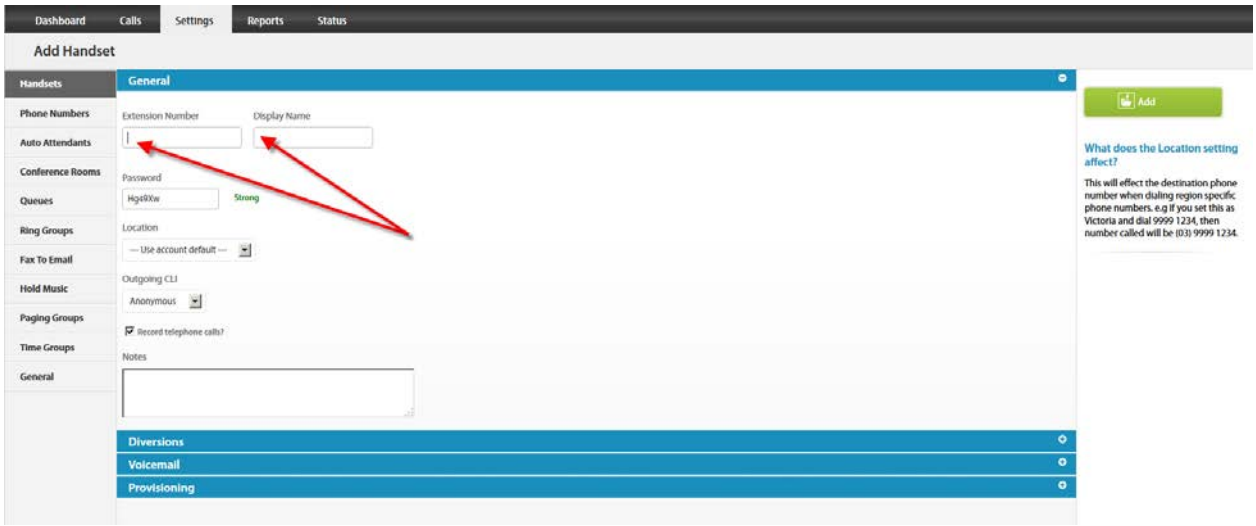

5. Select and expand Provisioning tab. Enter the MAC address of the phone

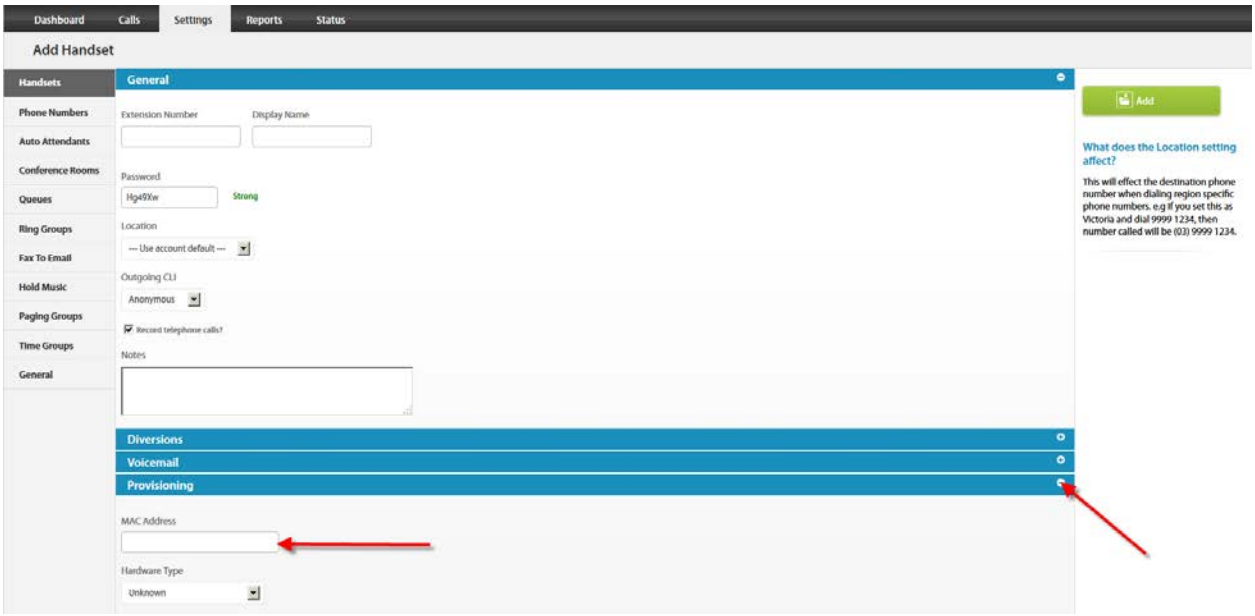

6. Select and expand Hardware Type. Select the phone model

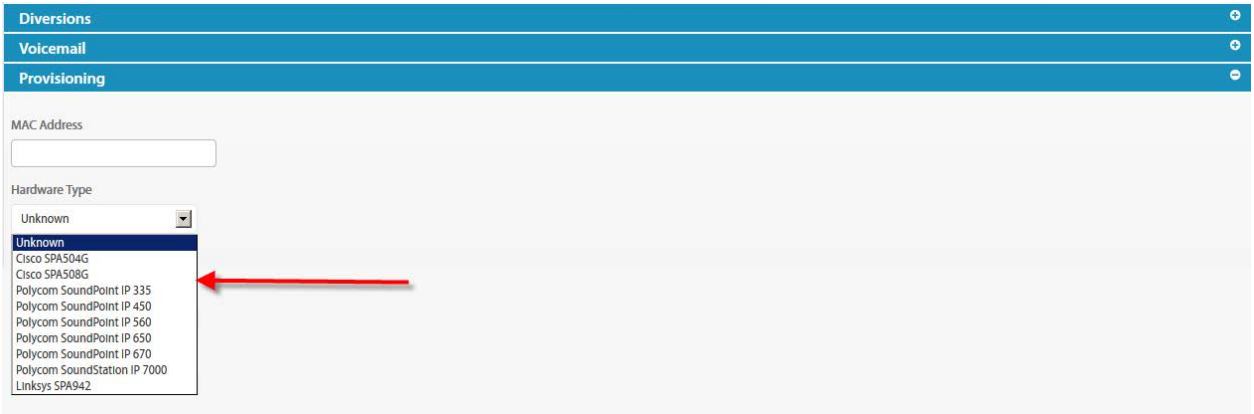

Click Add to finish your extension configuration.

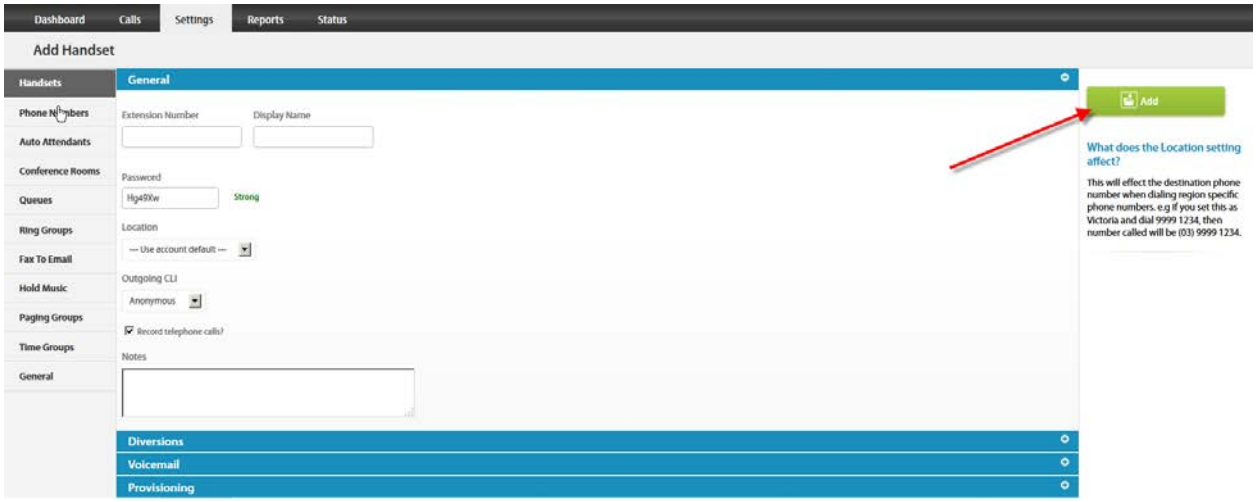

7. Connect your phone on the network with a DHCP server, and find out phone's IP address.
   On handset press Menu > Status > Network > TCP/IP Parameters (Menu, 2, 2, 1).

8. Use a compatible browser to browse the phone web menu using phones IP address

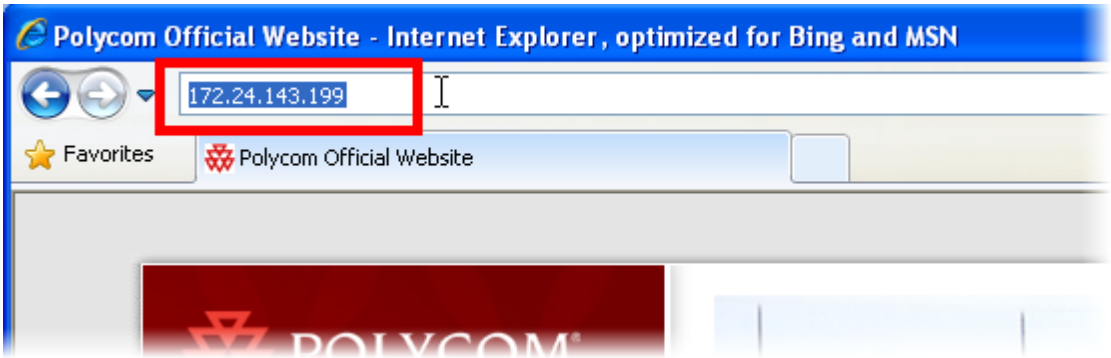

9. Login to the web interface with admin user (default password is 456)

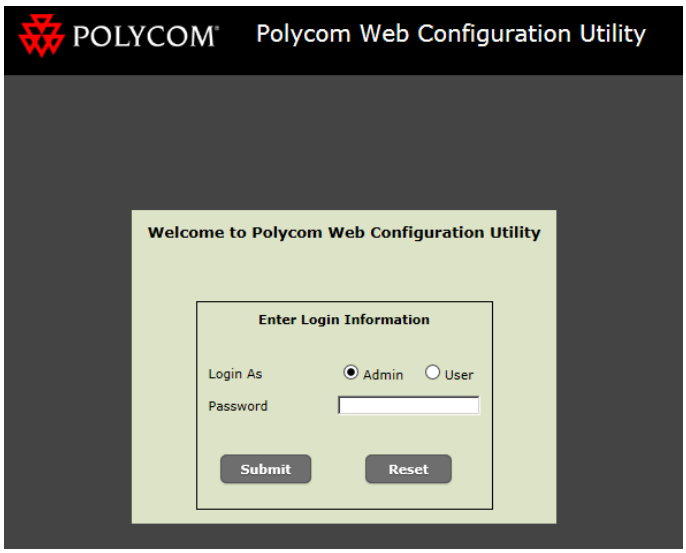

10. Browse to settings → Provisioning Server

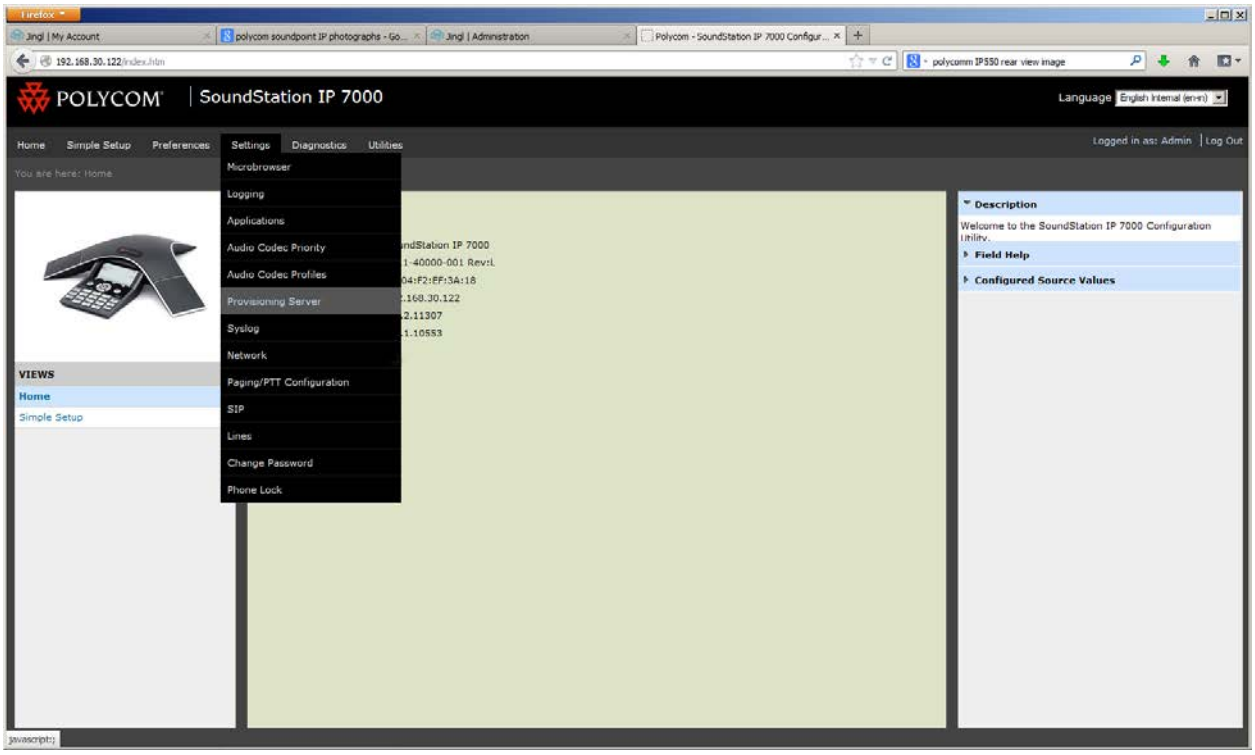

11. Select “HTTP” as Server Type
    Enter “tftp.jingl.com.au” as Server Address
    No Server User and Server Password required
    Expand DHCP Menu
    Ensure Boot Server is set to “Static”
    Ensure Boot Server Option is set to “160”
    Ensure Boot Server Type is set to “String”
    Ensure Option 60 Format is set to “ASCII String”

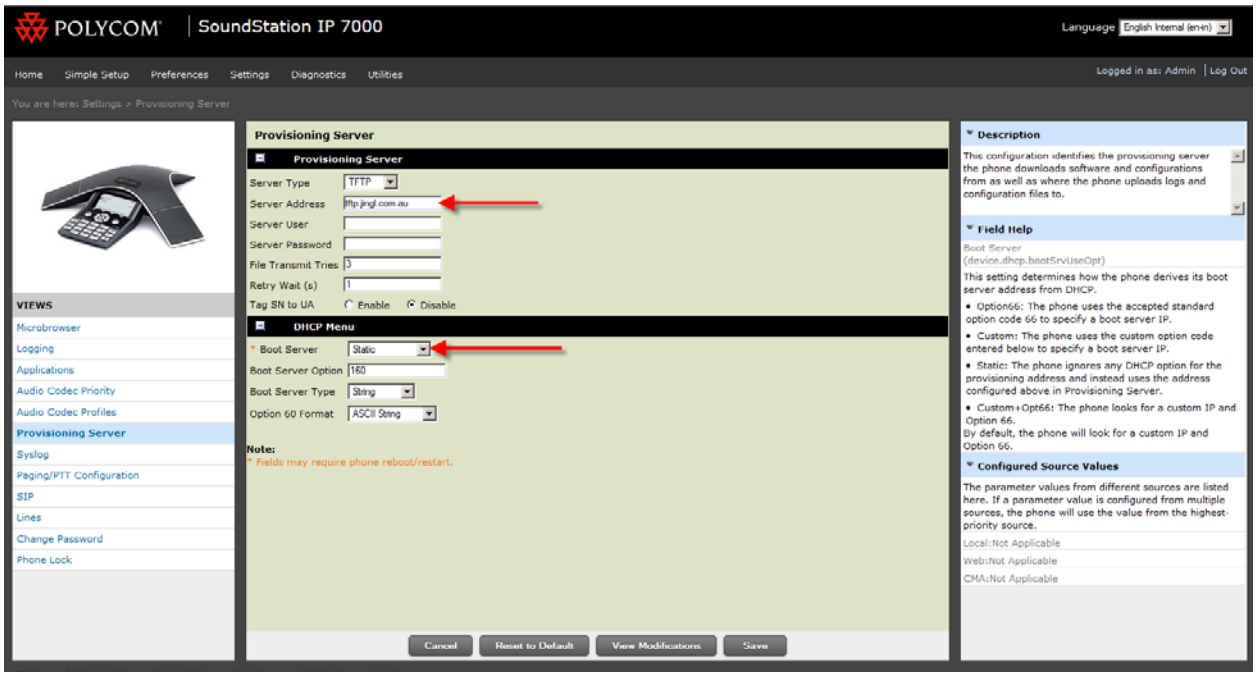

Click on the save button

12. Restart the phone for the new settings to take place, the phone will download and configure all settings from the provisioning server as well as any necessary firmware files.